



Giek 11
3891 KA Zeewolde
The Netherlands
T +31 (0) 36 522 2142

Version June 2026

HARSTRA

Function

The LDV basket is engineered and designed for machine cleaning of LDVs. During cleaning, the LDV's are pressurized and stay pressurized.

Description

This LDV basket can be used in a Harstra Wash9, Wash9HP, Wash4, Wash6HP or Wash6HP Barrier washing machine and all types of Harstra drying cabinets. After disabling and connecting your LDV's in the basket you can run one of the cleansing cycles for an optimal cleaning result.

The basket has capacity for 8 LDVs. After placing the LDVs in the mounting rings "A", the hoses can be connected with the connectors "B".

Pressurizing the system can be done by the connector "D" and after pressurizing the indicator "C" is raised and shows you the system is ready for washing and drying.

The LDV basket has 8 small parts baskets where you can put the parts of your LDV in during washing. A basket for every LDV.


Maintenance

Because the basket is used in a washing machine it is always clean and does not require further cleaning.

Check all the pressure connections every month and once a year a leak test is necessary for correct use of the basket. Ask your service partner for the annual leak test

HARSTRA

Diagrammatic view of the LDV basket

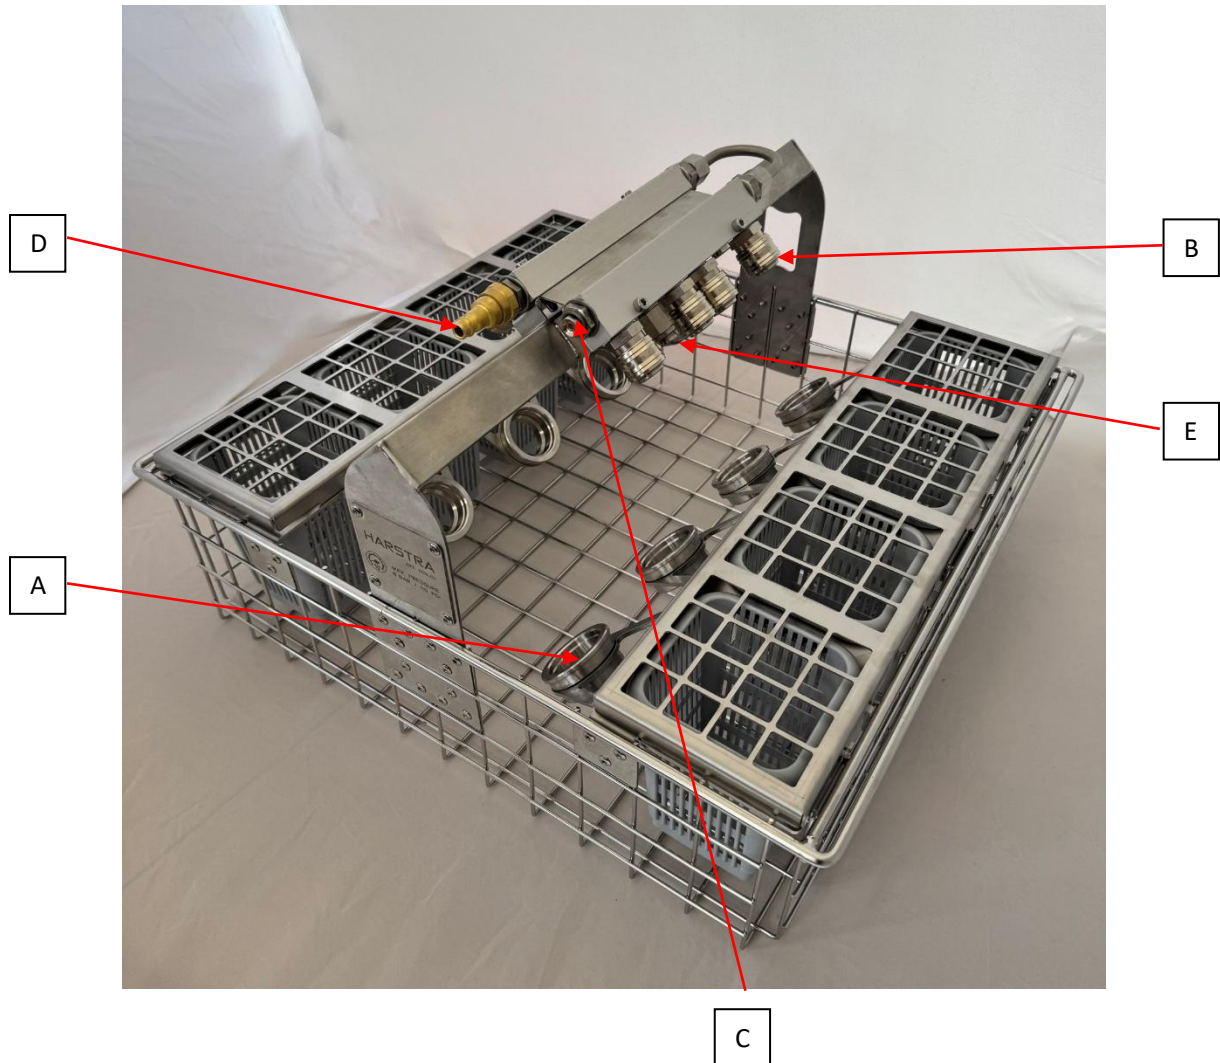

- A. LDV mounting ring (for Dräger Push-In and ESA LDV versions)
- B. Connection DN 7.2 EURO for LDV's
- C. Pressure indicator to indicate the system is pressurized
- D. Pressure connection DN 7.2 EURO for pressurizing the system
- E. Pressure relief valve (10 bar)

Specifications

Dimensions	: height x width x depth in mm.
External	: 200 x 532 x 480
Net weigh	: 6,5 kg.
Material	: stainless steel
Basket openings	: 40x40mm
Small parts baskets	: grey plastic dim.110x110x140mm (8 pieces)
Number of LDV's	: maximum 8 LDV's (Dräger ESA and Push-In version)
Connection LDV	: 8 connectors DN 7.2 EURO
Connection pressurizing	: DN 7.2 EURO
Pressure	: Maximum 8 bar